

# Transtar Part Numbering

8/31/2007

000-	-099
Prefix Letter	Suffix Letter
<b>No Prefix = P &amp; R Kits</b>	<b>No Suffix = Kits w/ Cork Pan Gaskets or Default Gasket'</b>
<b>No Prefix = Kits w/ Ray/Borg/Dynax Frictions</b>	* Default Gasket = Late models that are originally equipped with w/ Fiber or Bonded Gaskets. These will have NO Suffix.
<b>No Prefix = Filters, Filter Kits w/ SPX</b>	<b>F = Kits &amp; Filter Kits w/ Fiber Pan Gaskets (Exc Above)</b>
<b>No Prefix = Bushings Exc Teckpak</b>	<b>HD = Heavy Duty</b>
<b>A = Kits w/ Value Brand Frictions</b>	<b>HP = High Performance</b>
<b>A = Filters, Filter Kits (Exc OE, SPX, Filtertek)</b>	<b>P = Kits w/ Molded Pistons</b>
<b>A = OE Bands (Exc Borg Warner)</b>	** (No Suffix if Kit w/ Molded Pistons is the only option offered)
<b>B = Borg Warner Bands</b>	<b>W = Kits &amp; Filter Kits w/ Bonded Pan Gaskets (Exc Above)</b>
<b>C = Core</b>	<b>X = Kits w/o Pan Gasket</b>
<b>D = OE Kits, Filters, Filter Kits, &amp; Bands</b>	
<b>E = Filtertek Filters &amp; Filter Kits</b>	
<b>N = New Bands (Exc OE or BW)</b>	
<b>R = Relined Bands</b>	
<b>S = Sonnax</b>	
<b>T = Teckpak Bushings</b>	
<b>000 Paper &amp; Rubber Kit</b>	<b>050 Bushing, Forward Hub &amp; Front Ring Gear</b>
001 Sub Kit	051 Bushing, Shell
002 Paper & Rubber w/ Rings & Seals	052 Bushing, Forward Sun Gear (Or Front)
003	053 Bushing, Front Planet
004 Master w/ Frictions Less Steels	054 Bushing, High Clutch Hub, Sun / Gear Reaction Shaft
005	055 Bushing, Input Hub
006 Master w/ Frictions & Steels	056 Bushing, Reverse Sun Gear (Rear)
007 Super w/ Frictions Less Steels	057
008 Super w/ Frictions & Steels	058 Bushing, Rear Planet
009	059
<b>010 Filter, Main (Use M010 For Inline Filters)</b>	<b>060 Bushing, Rear Ring Gear Support</b>
011 Filter Kits, Main	061 Bushing, Rear Band Drum
012 Filter, Pump	062 Bushing, Output Shaft (Pilot), Or Counter Shaft
013 Filters, Spin On / Cooler Return	063 Bushing, Differential Housing
014 Filter, Governor	064 Bushing, Case
015 Filter, Valve Body	065
016 Filter, Solenoid	066 Bushing, Extension Housing
017 Filter, In Case	067
018 Filter, Pressure Reg. & Shift Solenoid	068
019 Filter, Grit Eater	069 Bushing, Shift Lever
<b>020 Band, Overdrive</b>	<b>070 Seal, Front Pump (Converter)</b>
021	071
022 Band, Intermediate (Direct, High/ Reverse)	072 Seal, Manual Lever
023	073 Seal, Throttle Lever
024 Band, Reverse	074 Seal, Extension Housing
025	075 Seal, Pinion
026 Band, Forward	076 Seal, Right Axle (Passenger Side)
027	077 Seal, Left Axle (Driver Side)
028	078 Seal, Speed-O-Gear
029	079 Seal, Accumulator Piston
<b>030 Bushing Kit</b>	<b>080</b>
031 Bushing, Converter Hub	081
032 Bushing, Converter Reactor (Shaft)	082
033	083 Seal, Overdrive Drum To Shaft
034 Bushing, Pump Body	084
035 Bushing, Inner Pump Gear	085
036 Bushing, Stator (Front) (Or Front Cover)	086
037 Bushing, Stator (Rear)	087
038 Bushing, Overdrive Drum	088
039 Bushing, Overdrive Hub	089 Retainer, Front Seal
040 Bushing, Overdrive Sun Gear	090 Retainer, Axle Seal
041 Bushing, Overdrive Shaft	091
042 Bushing, Overdrive Planet	092
043	093
044 Bushing, Center Support	094
045 Bushing, Sprocket Support	095 Seal Pipe, (Front)
046 Bushing, Intermediate Drum (Direct, High/ Rev)	096 Seal Pipe, (Rear)
047 Bushing, Input Shaft (Main Shaft)	097
048 Bushing, Forward Drum	098
049 Bushing, Turbine Shaft	099

# Transtar Part Numbering

8/31/2007

100- Prefix Letter	-199 Suffix Letter
<b>No Prefix = Exc Value Brand or OE Frictions</b>	<b>No Suffix = Metal Sealing Rings</b>
<b>No Prefix = Steels Exc OE</b>	<b>HD = Heavy Duty Frictions</b>
<b>A = Value Brand Friction</b>	<b>HP = High Performance Frictions</b>
<b>A = Valve Body Kits Exc Superior &amp; Transgc</b>	<b>HPK = High Performance Clutch Pack Friction Kit, or Steel Ki</b>
<b>D = OE Frictions &amp; Steels</b>	<b>T = Tumbled or Refurbished Steels</b>
<b>S = Superior Valve Body Kits</b>	<b>T = Teflon Sealing Rings</b>
<b>T = Transgo Valve Body Kits</b>	<b>X = Oversized Steels</b>
<b>Q = Quality Inspected Pressure Plates</b>	
<b>U = Used Pressure Plates</b>	
<b>100 Friction, Overdrive or 4th</b>	<b>150 Pressure Plate, Reverse (Top)</b>
101 Friction, 5th	151 Pressure Plate, Reverse (Bottom)
102 Friction, Overdrive Direct (Underdrive)	152 Pressure Plate, Coast Clutch (Top)
103 Friction, Intermediate (3rd)	153 Pressure Plate, Coast Clutch (Bottom)
104 Friction, Intermediate (2nd)	154 Pressure Plate, Low/ Reverse (Top)
105	155 Pressure Plate, Low/ Reverse (Bottom)
106 Friction, Direct (High/ Reverse)	156 Pressure Plate, Overrun Clutch (Top)
107	157 Pressure Plate, Overrun Clutch (Bottom)
108 Friction, Forward	158 Pressure Plate, Transfer Clutch (Top)
109	159 Pressure Plate, Transfer Clutch (Bottom)
110 Friction, Reverse	<b>160 Modulator</b>
111	161
112 Friction, Coast Clutch (Or 116)	162 Modulator Hose
113 Friction, Low/Low Hold	163 Valve, (Under Modulator)
114 Friction, Low/ Reverse	164 Pin, Modulator
115	<b>165 Valve Body Kit, Regular</b>
116 Friction, Overrun Clutch (Coast) (Or 112)	166
117	167 Valve Body Kit, Jr.
118 Friction, Transfer Clutch	168
119 Friction, Module	169 Valve Body Kit, Heavy Duty
<b>120 Steel, Overdrive or 4th</b>	170
121 Steel, 5th	171 Valve Body Kit, Competition
122 Steel, Overdrive Direct (Underdrive)	172
123 Steel, Intermediate (3rd)	173 Valve Body Kit, Competition Stick Shift
124 Steel, Intermediate (2nd)	174 Sonnax Sure Cure Kits
125 Steel, Intermediate (Waved)	<b>175 Sealing Ring Kit</b>
126 Steel, Direct (High/ Reverse)	176 Sealing Ring, Pump Slide
127 Steel, Direct (High/ Reverse) (Waved)	177 Sealing Ring, Input Shaft
128 Steel, Forward	178 Sealing Ring, Turbine Shaft, Stator Shaft Front
129 Steel, Forward (Waved)	179 Sealing Ring, Direct Clutch (High/ Reverse) (Stator Rear)
130 Steel, Reverse	180 Sealing Ring, Direct (Output Shaft)
131 Steel, Reverse (Waved)	181 Sealing Ring, Forward (Stator)
132 Steel, Coast Clutch (Combine w/ 136)	182 Sealing Ring, Sun Gear
133 Steel, Low/Low Hold	183 Sealing Ring, Intermediate Clutch
134 Steel, Low/ Reverse	184 Sealing Ring, Intermediate Shaft
135 Steel, Low/ Reverse (Waved)	185 Sealing Ring, Overdrive Clutch
136 Steel, Overrun Clutch (Coast)	186 Misc. Rings
137 Friction & Steel Module	187
138 Steel, Transfer Clutch	188
139 Steel Module	189 Sealing Ring, Governor
<b>140 Pressure Plate, Overdrive (Top)</b>	190
141 Pressure Plate, Overdrive (Bottom)	191 Sealing Ring, Intermediate Accumulator (Inner)
142 Pressure Plate, Overdrive Direct (Underdrive) (Top)	192 Sealing Ring, Intermediate Accumulator (Outer)
143 Pressure Plate, Overdrive Direct (Underdrive) (Bottom)	193 Sealing Ring, 2nd Servo Pin
144 Pressure Plate, Intermediate (Top)	194 Sealing Ring, 2nd Servo Piston (Inner)
145 Pressure Plate, Intermediate (Bottom)	195 Sealing Ring, 2nd Servo Piston (Outer)
146 Pressure Plate, Direct (High/ Reverse) (Top)	196 Sealing Ring, 4th Servo Piston (Inner)
147 Pressure Plate, Direct (High/ Reverse) (Bottom)	197 Sealing Ring, 4th Servo Piston (Outer)
148 Pressure Plate, Forward (Top)	198 Sealing Ring, Reverse Servo Piston (Inner)
149 Pressure Plate, Forward (Bottom)	199 Sealing Ring, Reverse Servo Piston (Outer)

## Transtar Part Numbering

8/31/2007

200-	-299
Prefix Letter	Suffix Letter
No Prefix = New Aftermarket Washers, Bearings	K = Washer or Bearing In Kit Form (Bearing w/ 2 Races)
AR = Reman Races	
A = Aftermarket Races	
D = OE Washers & Bearings	
<b>200 Washer Kit</b>	250 Race, Rear Planet (Front Race) (Countershaft Rear)
201 Bearing Kit	251 Washer/Bearing Rear Planet
202	252 Race, Rear Planet (Rear Race)
203	253 Race, Rear Ring Gear (Front Race)
204 Washer Kit, (For Planet Pinions)	254 Washer/Bearing, Rear Ring Gear
205 Spacer, Mainshaft Gear	255 Race, Rear Ring Gear (Rear Race)
206 Spacer, Countershaft Gear	256 Race, Rear Band Drum (Front Race)
207 Washer, Under Mainshaft Nut (# 795)	257 Washer/Bearing, Rear Band Drum
208 Washer, Under Countershaft Nut (# 796)	258 Race, Rear Band Drum (Rear Race)
209 Washer/Bearing, Stator Shaft	259 Race, Rear Support (Front Race)
210 Race, Pump Stator (Front Race)	260 Washer/Bearing, Rear Support
211 Washer/Bearing, Pump Stator	261 Race, Rear Support (Rear Race)
212 Race, Pump Stator (Rear Race)	262 Race, Case (Front Race)
213 Race, Overdrive Drum (Front Race)	263 Washer/Bearing, Case
214 Washer/Bearing, Overdrive Drum	264 Race, Case (Rear Race)
215 Race, Overdrive Drum (Rear Race)	265 Washer/Bearing, Governor (Top)
216 Race, Overdrive Planet (Front Race)	266 Washer/Bearing, Governor (Bottom)
217 Washer/Bearing Overdrive Planet	267 Race, Output Shaft Frt. (Mainshaft Distance Collar)
218 Race, Overdrive Planet (Rear Race)	268 Washer/Bearing, Output Shaft (Front)
219 Race, Overdrive Direct Drum (Front Race)	269 Race, Output Shaft Frt. (Countershaft Distance Collar)
220 Washer/Bearing, Overdrive Direct Drum (4th Clu Hub)	270 Race, Output Shaft Rear
221 Race, Overdrive Direct Drum (Rear Race)	271 Washer/Bearing, Output Shaft (Rear) (Countershaft 4th)
222 Race, Overdrive Ring Gear (Front Race)	272 Race, Output Shaft (Rear) (Rear Race)
223 Washer/Bearing, Overdrive Ring Gear	273 Race, Drive Pinion (Cup) (Differential Side)
224 Race, Overdrive Ring Gear (Rear Race)	274 Bearing, Drive Pinion (Cone) (Differential Side)
225 Race, Center Support (Front Race)	275 Bearing, Axle Shaft (Countershaft Center)
226 Washer/Bearing, Center Support (Driven Sprocket)	276 Shim, Drive Pinion (Rear)
227 Race, Center Support (Rear Race)	277 Shim, Drive Pinion (Front)
228 Race, Direct Drum (Front Race)	278 Race, Drive Sprocket/Transfer Gear
229 Washer/Bearing, Direct Drum	279 Bearing/Washer, Drive Sprocket/Transfer Gear
230 Race, Direct Drum (Rear Race)	280 Race, Driven Sprocket/Transfer Gear
231 Race, Forward Drum (Front Race)	281 Bearing/Washer, Driven Sprocket/Transfer Gear
232 Washer/Bearing, Forward Drum	282 Race, Idler Gear (Cup)
233 Race, Forward Drum (Rear Race)	283 Bearing, Idler Gear (Cone)
234 Race, Forward Hub (Front Race)	284 Shim, Idler Gear
235 Washer/Bearing, Forward Hub, (Mainshaft Center)	285 Washer, Sprag (Front)
236 Race, Forward Hub (Rear Race)	286 Washer, Sprag (Rear)
237 Race, Front Planet (Front Race)	287 Bearing, Mainshaft (Input Shaft) Front
238 Washer/Bearing, Front Planet	288 Race, Differential Carrier (Cup) (Ring Gear Side)
239 Race, Front Planet (Rear Race)	289 Bearing, Differential Carrier (Cone) (Ring Gear Side)
240 Race, Front Sun Gear (Front Race)	290 Shim, Differential Carrier (Ring Gear Side)
241 Washer/Bearing Front Sun Gear	291 Race, Differential Carrier (Cup) (Opposite Ring Gear Side)
242 Race, Front Sun Gear (Rear Race)	292 Bearing, Differential Carrier (Opposite Ring Gear Side)
243 Race, Shell (Front Race)	293 Shim, Differential Carrier Brg. (Opposite Ring Gear Side)
244 Washer/Bearing, Shell	294 Bearing, Countershaft 1st-Low Gear
245 Race, Shell (Rear Race)	295 Bearing, Converter Reactor (Inner)
246 Race, Rear Sun Gear (Front Race)	296 Bearing, Viscous Coupling or Awd Differential
247 Washer/Bearing, Rear Sun Gear	297 Race, Viscous Coupling or Awd Differential
248 Race, Rear Sun Gear (Rear Race)	298 Bearing, Driven Sprocket Support (Inner)
249	299 Bearing,

# Transtar Part Numbering

8/31/2007

300-	-399
Prefix Letter	Suffix Letter
No Prefix = New Aftermarket Gaskets & O-Rings D = OE Gaskets & O-Rings	No Suffix = Cork Pan Gaskets or Default Gasket' * Default Gasket = Late models that are originally equipped with w/ Fiber or Bonded Gaskets. These will have NO Suffix. <b>F = Fiber Pan Gaskets (Exc Above)</b> <b>W = Bonded Pan Gaskets (Exc Above)</b>
300 Gasket, Bottom Pan	350 O-Ring, Converter Clutch Accumulator
301 Gasket, Side Pan (Or Front Bottom Pan)	351 O-Ring, Input Clutch Accumulator
302 Gasket, Top Pan	352 O-Ring, 1-2 Accumulator
303 Gasket, Differential Cover (Pan)	353 O-Ring, 2-3 Accumulator
304 Gasket, Transfer Cover (Or Rear)	354 O-Ring, 3-4 Accumulator
305 Gasket, Extension Housing	355 O-Ring, Low/ Reverse Accumulator
306 Gasket, Governor Cover	356 O-Ring, Mainshaft
307 Gasket, Rear Servo Cover (Or Front)	357 O-Ring, Countershaft
308 Gasket, Accumulator Cover	358 O-Ring, Secondary Shaft
309 Gasket, Pump Bolt Washer Gasket	359 O-Ring, 1-2 Servo Piston
310 Gasket, Pump	360 O-Ring, 1-2 Servo Cover
311 O-Ring, Pump	361 O-Ring, Intermediate Servo Piston
312 O-Ring, Pump Bolt	362 O-Ring, Intermediate Servo Cover
313 O-Ring, Pump Slide (Or Pump Gear)	363 O-Ring, Reverse Servo Piston
314 Seal, Pump Slide (Rubber)	364 O-Ring, Reverse Servo Cover
315 Seal, Pump Slide Support (Plastic)	365 O-Ring, 2-3 Servo Piston
316 Gasket, Release Cover	366 O-Ring, 2-3 Servo Cover
317 Gasket, Extension Housing To Transfer Case	367 O-Ring, Overdrive Servo (Inside)
318 Gasket, Converter Housing To Case	368 O-Ring, Speed-O-Sleeve (Outer)
319 Gasket, P.T.O. Cover	369 O-Ring, Speed-O-Housing
320 Gasket, Valve Body (Upper) (Case To Plate)	370 O-Ring, Speed Sensor
321 Gasket, Valve Body (Lower) (Valve Body To Plate)	371 O-Ring/Boot, Filler Tube
322 Gasket, Aux. Valve Body	372
323 Gasket, Miscellaneous	373 O-Ring or Boot, Detent
324 Gasket, Channel Plate (Case Cover)	374 O-Ring, Output Shaft To Yoke (Or Idler Shaft Cover)
325 Gasket Kit, Case (Or Channel Plate)	375 O-Ring, Pinion Shaft Retainer
326 Gasket, Filter	376 O-Ring, Solenoid
327 Gasket, Modulator	377 O-Ring, Neutral Switch
328 Gasket, Solenoid	378 O-Ring, Cooler Line (Or By-Pass Valve)
329 Gasket, Breather	379 O-Ring/Boot, Filter
330 O-Ring, 4th Clutch Piston (Inner) (Or Overdrive)	380 O-Ring, Turbine Shaft (Or Input Shaft)
331 O-Ring, 4th Clutch Piston (Outer) (Or Overdrive)	381 O-Ring, Stator Tube/Converter Hub or Conv. Reactor
332 O-Ring, 2nd Clutch Piston (Inner)	382 O-Ring, Oil Pipe
333 O-Ring, 2nd Clutch Piston (Outer)	383 Seal, Oil Pipe
334 O-Ring, Input Clutch Piston (Inner) (Or Forward)	384 Seal, Band Lever Shaft
335 O-Ring, Input Clutch Piston (Outer) (Or Forward)	385 Hockey Puck, Ck Valve
336 O-Ring, 3rd Clutch Piston (Inner)	386 Plug, w/ Seal (Cup Plug)
337 O-Ring, 3rd Clutch Piston (Outer)	387 Gasket/Shim, Pan Plug
338 O-Ring, Reverse Clutch Piston (Inner)	388 O-Ring, Torque Converter Hub/ Inner Pump Gear
339 O-Ring, Reverse Clutch Piston (Outer)	389
340 O-Ring, Coast Clutch Piston (Inner) or Overrun Clu	390 Seal-Up Kit, External w/ Pan Gasket
341 O-Ring, Coast Clutch Piston (Outer) or Overrun Clu	391 Seal-Up Kit, External L/Pan Gasket
342 O-Ring/Seal, Valve Body To Case	392
243 O-Ring, Differential Screw-In Adjusters	393
344 O-Ring/Seal, Miscellaneous	394
345 O-Ring, Governor Cover	395
346 O-Ring, Modulator	396
347 O-Ring, Electrical Connector	397
348 O-Ring, Extension Housing	398
349 O-Ring, Shaft Lever	399 O-Ring/Gasket, Differential Retainer

# Transtar Part Numbering

8/31/2007

400-	-499
Prefix Letter	Suffix Letter
No Prefix = Aftermarket Electrical (Exc Raybestos & Domestic NTP)	RK = Component Repair Kit/Rebuild Kit
No Prefix = ATSG Technical Manuals	
A = Aftermarket Electrical (Raybestos & Domestic NTP)	
ATM = ATRA Technical Manuals (see also TMG)	
D = OE Electrical Components	
M = Misc. Parts (Hoses, Oils, Soaps, Paints, Etc)	
M = Transel Technical Manuals	
R = Rebuilt Solenoids	
T = Teckpak Electrical Components	
TMG = Manuals by GM through ATRA (see also ATM)	
<b>400 Technical Manuals (ATSG)</b>	<b>450 Detent Cables</b>
401 Dealer Technical Manuals	451 Detent Cable Repair Kits
402 Specialty Manuals (Transel)	452 Shift Cables
403 Specialty Manual Sets (Transel)	453
404	454
405	455
406	456
407 Technical Video	457
408	458
409	459
<b>410 Neutral Switch/Manual Lever Switch/Tr Sensor</b>	<b>M460 Rubber Hoses, Air, Vacuum</b>
411 Pressure Switch, 2nd Clutch	M461 Hard Tubing
412 Pressure Switch, 3rd Clutch	M462 Cooler Line Repair Components
413 Pressure Switch, 4th Clutch	M463 Hitch Pins, Grommets, Ground Straps, Posi Lock Connectors, etc
414 Switch, Spark Control/Neutral Pressure Switch	M464 Converter Bolts
415 Switch, Governor (Or Governor Sensor)	M465 Lubes & Greases, Oil Supplements & Additives
416 Pulse Switch, 4-3	M466 Oil Dry, Oil Dispersants
417 Pulse Generator (Magnetic)	M467
418 Pulse Width Modulated (PWM)	M468 Oil Temperature Devises
419 Switch, On-Off Pulse Type Speed Sensor (Magnetic Pick-Up)	M469 Sealers, Silicones, etc.
420 Solenoid Assembly, Shift	M470 Hand Cleaners, Soaps, etc.
421 Solenoid, 1-2 Shift	M471 Markers
422 Solenoid, 2-3 Shift	M472 Light Bulbs
423 Solenoid, 3-4 Shift	M473 Paints
424 Electrical Rebuilding Kit	M474 Converter Nuts
425 Solenoid, Torque Converter Clutch (TCC)	<b>475 Teflon Sleeve (On Turbine Shaft)</b>
426 Solenoid, Overrun Clutch	476 Silencer Ring
427 Solenoid, Overdrive Clutch	477 Reluctor, Pulse Generator For Speed Sensor
428 Misc. Pressure Control Solenoids (Exc EPC)	M478 Locking Compounds - Loctite
429 Sensor, Throttle Position Sensor (TPS)	479
430 Misc. Shift Solenoids	480 Capsule w/ Ball
431 Solenoid, Electronic Pressure Control (EPC)	481
432 Solenoid, Duty (Or Governor Pressure)	482
433 Solenoid, Transfer	483 Cup Plugs
434 Solenoid, Kickdown	484 Orifice Plugs
435	485 Dowel Pins or Alignment Pins
436 Sensor, Vehicle Output Speed (VSS)	486
437 Sensor, Oil Temperature (TOT or TFT)	487 Grommets, Shift Lever & Vacuum T'S
438 Sensor, Turbine (Input) Shaft Speed (TSS)	488
439	489 Dust Cover
440 Switch, Kickdown Servo	490 Vent, Case
441 Thermostatic Element	491 Vent, Differential
442 Switch, Manifold Pressure & Vacuum Regulator	492
443 Power Train Control Module (PCM)	493 Dip Stick
444 Case Connector	494 Filler Tube
445 Wire Harness, External	495 Pick-Up Tube (Filter)
446 Wire Harness, Internal	496 Cooler Line Components (Push-In)
447 Electronic Adaptors & Testers	497
448 Misc. Electronic Components	498
449 On-Board Computers	499

# Transtar Part Numbering

8/31/2007

500-	-599
Prefix Letter	Suffix Letter
<b>AR = Remanufactured Hard Parts</b>	<b>Valve Assy.</b>
<b>A = New Aftermarket</b>	<b>A = Pres. Relief</b>
<b>C = Core</b>	<b>B = Bypass</b>
<b>D = OE Hard Parts</b>	<b>C = TCC Valve</b>
<b>MR = Material Recovery</b>	<b>D = 1-2 Cap. Mod.</b>
<b>S = Sonnax</b>	<b>E = Accumulator</b>
<b>Q = Quality Inspected Hard Parts</b>	<b>F = Boost, P.R.</b>
<b>U = Used Hard Parts</b>	<b>G = Servo</b>
	<b>H = Misc</b>
	<b>L = Spool</b>
	<b>M = Manual</b>
	<b>N = Throttle</b>
	<b>P = Pressure Regulator</b>
	<b>Q = TCC Regulator</b>
	<b>R = Reverse Boost</b>
	<b>S = Shift</b>
	<b>T = TV Boost</b>
	<b>W = PWM Control</b>
	<b>RK = Repair Kit</b>
<b>500 Pump, Complete (Front)</b>	<b>550 Drum, Overdrive Clutch</b>
501	551 Drum, Overdrive Direct Clutch
502	552 Drum, Intermediate Clutch
503	553
504	554 Drum, Forward Clutch
505	555 Drum, Direct Clutch (High/ Reverse 3rd Clutch)
506	556 Drum, Reverse Clutch
507 Pump Components (Valves, Balls, Plugs, Etc.)	557 Drum, Low/ Reverse Clutch
508	558 Drum, Reaction (2-4 Drum)
509 Pump (Rear)	559 Drum, Coast Clutch
<b>510 Pump Body w/ Gears (Front)</b>	<b>560 Piston Kit, Overdrive Clutch</b>
511 Oil Pump Housing (Less Rotor Kit)	561 Piston Kit, Overdrive Direct Clutch
512	562 Piston Kit, Intermediate Clutch
513	563 Piston Kit, (Low-Hold Manual Low)
514	564 Piston Kit, Forward Clutch
515	565 Piston Kit, Direct Clutch (High/ Reverse 3rd Clutch)
516	566 Piston Kit, Reverse Clutch
517	567 Piston Kit, Low/ Reverse Clutch
518	568 Piston Kit, Reaction (2-4 Clutch)
519	569 Piston Kit, Coast Clutch
<b>520 Stator, Front (Pump Cover)</b>	<b>570 Hub, Overdrive Clutch</b>
521	571 Hub, Overdrive Direct Clutch
522	572 Hub, Intermediate Clutch
523	573 Hub, Low Hold (Low Braking Clutch)
524	574 Hub, Forward Clutch
525	575 Hub, Direct Clutch (High/ Reverse 3rd Clutch)
526	576 Hub, Reverse Clutch
527	577 Hub, Low/ Reverse Clutch
528	578 Hub, Reaction (2-4 Clutch)
529 Converter Reactor (Or Stator Tubes)	579 Hub, Coast Clutch
<b>530 Pump Gear Sets (H = Suffix For Oversize)</b>	<b>580 Planet, Overdrive (-1 For Pinion Washers)</b>
531 Pump Rotor Sets	581 Planet Kits, Overdrive Assy
532 Pump Rotor (Inner)	582 Planet, Forward
533 Pump Vanes	583 Planet Kits, Forward Assy
534 Pump Slide (Outer)	584 Planet, Rear
535 Pump Pivot Pin (For Pump Slide)	585
536 Spring, Pump Slide (Outer)	586 Planet, Underdrive
537 Spring, Pump Slide (Inner)	587
538 Ring, Pump Vane	588
539 Guide, Pump Rotor (Plastic)	589
540 Spring, Pivot Pin (Or By-Pass Valve)	<b>590 Ring Gear, Overdrive Planet</b>
541	591
542	592 Ring Gear, Forward Planet
543 Flange, Pump Drive	593
544 Plate, Pump	594 Ring Gear, Rear Planet
<b>545 Housing, 4th Clutch</b>	<b>595</b>
546 Apply Ring, Overdrive Clutch	596 Ring Gear, Underdrive
547 Apply Ring, Forward Clutch	597
548 Apply Ring, Direct Clutch	598 Ring Gear, Differential Planet
549 Apply Ring, Low/ Reverse Clutch	599

# Transtar Part Numbering

8/31/2007

600-	-699
Prefix Letter	Suffix Letter
<b>AR = Remanufactured Hard Parts</b>	<b>K = Hard Parts In Kit Form</b>
<b>A = New Aftermarket</b>	<b>Components</b>
<b>C = Core</b>	<b>681-1 = Bodies</b>
<b>D = OE Hard Parts</b>	<b>681-2 = Valves</b>
<b>MR = Material Recovery</b>	<b>681-3 = Springs</b>
<b>S = Sonnax</b>	<b>681-4 = Weights</b>
<b>Q = Quality Inspected Hard Parts</b>	<b>681-5 = C Clips</b>
<b>U = Used Hard Parts</b>	
	<b>Sprag #-1 = Rollers</b>
	<b>Sprag #-2 = Cages</b>
	<b>Sprag #-3 = Springs</b>
<b>600 Hub, Overdrive Ring Gear</b>	<b>650 Sprag, Overdrive</b>
601	651
602 Hub, Forward Ring Gear	652 Sprag, Intermediate (Low/ Reverse)
603	653
604 Hub, Rear Ring Gear	654 Sprag, Rear
605 Hub, Rear Ring Gear Assembly	655
606	656 Sprag, 3rd
607	657
608	658 Sprag, Input
609	659
<b>610 Sun Gear, Overdrive Planet</b>	<b>660 Sprag Race, Overdrive (Inner)</b>
611	661 Sprag Race, Overdrive (Outer)
612 Sun Gear, Forward Planet	662 Sprag Race, Intermediate (Inner) (Low/ Reverse)
613	663 Sprag Race, Intermediate (Outer) (Low/ Reverse)
614 Sun Gear, Rear Planet	664 Sprag Race, Rear (Inner)
615	665 Sprag Race, Rear (Outer)
616 Sun Gear, Underdrive	666 Sprag Race, 3rd (Inner)
617 Sun Gear, Reduction Gear Planet	667 Sprag Race, 3rd (Outer)
618 Sun Gear, Final Drive Planet	668 Sprag Race, Input (Inner)
619 Sun Gear Spacer	669 Sprag Race, Input (Outer)
<b>620 Drive Shell, Overdrive</b>	<b>670 Shaft, Input</b>
621	671 Shaft, Pump Drive
622 Drive Shell, Input	672 Shaft, Main
623	673 Shaft, Turbine
624 Drive Shell, Reaction	674 Shaft, Intermediate
625	675 Shaft, Secondary (Or Overdrive)
626 Drive Shell, Output	676 Shaft, Counter
627	677 Shaft, Final Drive
628	678 Shaft, Output
629	679 Shaft, Idler
<b>630 Center Support, Front Housing</b>	<b>680 Governor, (Mechanical)</b>
631 Center Support, Front Assembly Complete	681 Governor Components
632 Center Support, Center	682 Governor Housing (Governor Bolts To Housing)
633	683 Gear, Governor Drive (Drives Governor Gear)
634 Center Support, Rear	684 Gear, Governor Driven (On Governor)
635	685 Support, Governor
636 Center Support Hub	686 Cover, Governor
637	687 Retainer, Governor
638	688
639 Anti-Clunk Spring (Counter Shaft Lock Keys)	689 Weight, Governor
<b>640 Sprag Assembly, Overdrive</b>	<b>690 Park Gear</b>
641	691 Output Shaft Cover
642 Sprag Assembly, Intermediate (Low/ Reverse)	692 Plate, Overdrive Adaptor
643	693 Bracket, Idler Shaft
644 Sprag Assembly, Rear	694 Retainer, Overdrive Sprag Plate
645	695
646 Sprag Assembly, 3rd	696 Crush Sleeve, (Spacer For Pinion)
647	697 Oil Distributor Sleeve
648 Sprag Assembly, Input	698 Oil Baffle
649	699 Oil Slinger

# Transtar Part Numbering

8/31/2007

700-	-799
Prefix Letter	Suffix Letter
<b>AR = Remanufactured Hard Parts</b>	<b>Valve Assy. Components</b>
<b>A = New Aftermarket</b>	<b>A = Pres. Relief</b> <b>A-1 = Valves</b> <b>584-1 = Pinion Washers</b>
<b>C = Core</b>	<b>B = Bypass</b> <b>A-2 = Sleeves</b> <b>584-2 = Pinion Gears</b>
<b>D = OE Hard Parts</b>	<b>C = TCC Valve</b> <b>A-3 = Springs</b> <b>584-3 = Pinion Pins</b>
<b>MR = Material Recovery</b>	<b>D = 1-2 Cap. Mod.</b> <b>A-4 = Retainers</b> <b>584-4 = Pinion Needles</b>
<b>P = Premium Valve Body</b>	<b>E = Accumulator</b> <b>A-5 = Ck Balls</b> <b>584-5 = Planet Housings</b>
<b>S = Sonnax</b>	<b>F = Boost, P.R.</b> <b>A-6 = Plugs</b> <b>584-6 = Lock Pins (Pinion)</b>
<b>Q = Quality Inspected Hard Parts</b>	<b>G = Servo</b>
<b>U = Used Hard Parts</b>	<b>H = Misc</b>
	<b>L = Limit / EPC</b> <b>A-7 = Plungers</b> <b>584-7 = All As A Set</b>
	<b>M = Manual</b>
	<b>N = Throttle</b>
	<b>P = Pressure Regulator</b>
	<b>Q = TCC Regulator</b>
	<b>R = Reverse Boost</b>
	<b>S = Shift</b>
	<b>T = TV Boost</b>
	<b>W = PWM Control</b>
	<b>RK = Repair Kit</b>
<b>700 Chain</b>	<b>750 Converter Housing (Bell Housing)</b>
701 Chain Snubber	751
702 Chain Oiler	752
703	753 Converter Housing Components
704	754
<b>705 Sprocket, Drive</b>	<b>755 Case Cover (Front)</b>
706 Sprocket, Driven	756 Case Cover (Top)
707 Gear, Reduction Drive	757 Case Cover (Side)
708 Gear, Reduction Driven	758 Differential Case Cover (Aluminum)
709	759 Case Cover (Rear)
<b>710 Gear, Transfer Drive (Main Shaft)</b>	<b>760 Case (Main)</b>
711 Support, Transfer Gear (Main Shaft)	761 Case Components
712 Gear, Transfer Driven (Counter Shaft)	762 Case, Overdrive
713 Support, Transfer Gear (Counter Shaft)	763 Case, Differential
714 Gear, Idler Transfer (Secondary Shaft)	764 Spacer, Case To Stator (Aluminum)
<b>715 Differential Assembly (Housing, Ring, &amp; Side Gears)</b>	<b>765 Pan, Bottom</b>
716 Housing, Differential (W/Side Gears, L/Ring Gear)	766 Pan, Side
717 Differential Components	767 Pan, Top
718 Differential Assembly (Other Than Main) (Awd Type)	768
719 Viscous Coupling	769 Cover, Filter
720 Ring Gear, Differential (For Sets Use 730K)	<b>770 Extension Housing</b>
721	771 Plate, Extension Housing
722	772
723	773 Speed-O-Cable
724 Retainer, Differential (Bearing Retainer Front)	774 Housing, Speed-O-Gear (Driven)
725 Retainer, Differential (Bearing Retainer Rear)	<b>775 Bolt, Converter</b>
726 Retainer, Differential (Main Cap Type)	776 Bolt, Bell To Case
727 Retainer Clips (Or Bolt & Nut Locks)	777 Bolt, Pump To Case
728	778 Bolt, Stator To Pump Body
729	779 Bolt, Bottom Pan To Case
<b>730 Pinion (Differential) (For Sets Use 730K)</b>	780 Bolt, Case To Case Cover
731	781 Bolt, Extension Housing To Case
732	782 Bolt, Valve Body To Case
733	783 Bolt, Center Support To Case
734	784 Bolt, 4th Clutch Housing
735 Retainer, Pinion	785 Bolt, Differential Cover To Case
736 Pinion Center	786 Bolt, Differential Ring Gear To Housing
737	787 Bolt, Pinion Cover
738	788 Bolt, Side Pan To Case
739	789 Bolt, Top Pan To Case
<b>740 Valve Body Assembly (Main)</b>	790 Bolt, Rear Support To Case
741 Valve Body Components	791 Bolt, Aux. Valve Body To Case
742 Secondary Valve Body Assembly	792 Bolt, Accumulator Cover
743	793 Bolt, Differential Retainer To Case (Rear)
744 Aux. Valve Body Assembly	794 Bolt, Differential Retainer To Case (Front)
745	795 Nut, Main Shaft
746 Spacer Plate, (Other Than Main)	796 Nut, Counter Shaft
747 Spacer Plate, Valve Body (Main)	797 Nut, Secondary Shaft (Or Lever, Detent)
748 Spacer Plate Components	798 Nut, Yoke (Or Output Shaft)
749 Cam Assembly (Valve Body Linkage)	799 Nut, Idler Shaft (Or Lever, Shift)



# Transtar Part Numbering

8/31/2007

800-	-899
Prefix Letter	Suffix Letter
AR = Remanufactured Hard Parts	
A = New Aftermarket	
C = Core	
D = OE Hard Parts	
MR = Material Recovery	
S = Sonnax	
Q = Quality Inspected Hard Parts	
U = Used Hard Parts	
<b>800 Gear, 1st Mainshaft (Low)</b>	<b>850 Cushion Spring, Overdrive Clutch</b>
801 Gear, 1st Countershaft (Low)	851 Cushion Spring, Overdrive Direct Clutch
802 Gear, 1st Secondary Shaft (Low)	852 Cushion Spring, Intermediate Clutch
803 Gear, 2nd Mainshaft	853 Cushion Spring, Forward Clutch
804 Gear, 2nd Countershaft	854 Cushion Spring, Reverse Clutch
805 Gear, 2nd Secondary Shaft	855 Cushion Spring, Reaction Clutch
806 Gear, 3rd Mainshaft	856 Cushion Spring, Coast Clutch
807 Gear, 3rd Countershaft	857 Cushion Spring, Low/ Reverse Clutch
808 Gear, 3rd Secondary Shaft	858 Cushion Spring, Direct Clutch
809 Gear, 4th Mainshaft	859
810 Gear, 4th Countershaft	<b>860 Snap Ring, Overdrive Clutch (Bottom)</b>
811 Gear, 4th Secondary Shaft	861 Snap Ring, Overdrive Clutch (Top)
812 Gear, 5th Mainshaft	862 Snap Ring, Overdrive Spring & Retainer
813 Gear, 5th Counter Shaft	863 Snap Ring, Overdrive Direct Clutch (Bottom)
814 Gear, 5th Secondary Shaft	864 Snap Ring, Overdrive Direct Clutch (Top)
815 Gear, Reverse Mainshaft	865 Snap Ring, Overdrive Direct Spring & Retainer
816 Gear, Reverse Countershaft	866 Snap Ring, Overdrive Sun Gear
817 Gear, Reverse Secondary Shaft	867 Snap Ring, Overdrive Planet
818 Gear, Reverse Idler	868 Snap Ring, Overdrive Ring Gear (Or Pinion Pin Retainer)
819 Shaft, Reverse Idler	869 Snap Ring, Coast Clutch (Bottom)
820 Cover, Reverse Idler	870 Snap Ring, Coast Clutch (Top)
821 Gear, Mainshaft Idler	871 Snap Ring, Coast Clutch Spring & Retainer
822 Gear, Countershaft Idler	872 Snap Ring, Intermediate Clutch (Bottom)
823 Gear, Secondary Shaft Idler	873 Snap Ring, Intermediate Clutch (Top)
824	874 Snap Ring, Intermediate Spring & Retainer
825 Gear, PTO	875 Snap Ring, Forward Clutch (Bottom)
826	876 Snap Ring, Forward Clutch (Top)
827	877 Snap Ring, Forward Spring & Retainer
828	878 Snap Ring, Direct Clutch (Top)
829	879 Snap Ring, Direct Spring & Retainer
<b>830 Selector</b>	880 Snap Ring, Input Shaft
831 Lever, Range Selector	881 Snap Ring, Forward Hub
832	882 Snap Ring, Front Planet Ring Gear
833	883 Snap Ring, Center Support
834	884 Snap Ring, Front Sun Gear
835 Hub, Selector	885 Snap Ring, Low/ Reverse Clutch
836	886 Snap Ring, Shell
837	887 Snap Ring, Split (Horse Shoe Clip)
838 Axle Flange	888 Snap Ring, Rear Sun Gear
839 Magnet	889 Snap Ring, Rear Planet Ring Gear
840 Shift Fork	890 Snap Ring, Rear Drum
841 Yoke (Output Shaft)	891 Snap Ring, Reverse Clutch (Bottom)
842 Bracket, Driven Speed-O Housing Clip	892 Snap Ring, Reverse Clutch (Top)
843 Bracket, Modulator/Solenoid	893 Snap Ring, Reverse Spring & Retainer
844 Key (For Key-Way)	894 Snap Ring, Output Shaft (Front)
845 Plate, Pick-Up (Speed Sensor)	895 Snap Ring, Output Shaft (Rear)
846 Misc. Brackets, Mounts, Diff., Struts	896 Snap Ring, Servo Cover
847 Gear, Speed-O Drive	897 Snap Ring, Extension Housing (Or Pinion)
848 Gear, Speed-O Driven	898 Snap Ring, Drive Sprocket
849 Clip, Drive Speed-O-Gear	899 Snap Ring, Driven Sprocket

# Transtar Part Numbering

8/31/2007

900-	-999
Prefix Letter	Suffix Letter
<b>AR = Remanufactured Hard Parts</b>	<b>Components</b>
<b>A = New Aftermarket</b>	<b>915-1 = Lever</b> <b>991-1 = Lever</b>
<b>C = Core</b>	<b>915-2 = Apply Strut</b> <b>991-2 = Spring &amp; Roller (Detent)</b>
<b>D = OE Hard Parts</b>	<b>915-3 = Anchor Strut</b> <b>991-3 = Rooster Comb</b>
<b>MR = Material Recovery</b>	<b>915-4 = Lever Pin</b> <b>991-4 = Shaft (Manual)</b>
<b>S = Sonnax</b>	<b>915-5 = Retainer or Clip</b> <b>991-5 =</b>
<b>Q = Quality Inspected Hard Parts</b>	<b>991-6 = Bracket (Parking Lock)</b>
<b>U = Used Hard Parts</b>	<b>991-7 = Wire Link</b>
	<b>995-1 = Park Pawl</b>
	<b>995-2 = Park Pin</b>
	<b>995-3 = Park Spring</b>
<b>900 Servo Assembly, Overdrive</b>	<b>950 Accumulator Assembly, Underdrive</b>
901 Servo Spring, Overdrive	951 Accumulator Spring, Underdrive
902 Servo Piston, Overdrive	952 Accumulator Piston, Underdrive
903 Servo Pin, Overdrive	953 Accumulator Pin, Underdrive
904 Servo Cover, Overdrive	954 Accumulator Cover, Underdrive
905 Servo Assembly, Intermediate	955 Housing, Forward Piston
906 Servo Spring, Intermediate	956 Housing, Intermediate Piston
907 Servo Piston, Intermediate	957 Housing, Reverse Piston
908 Servo Pin, Intermediate	958 Tube, Brake Apply (Tin Shield)
909 Servo Cover, Intermediate	959
910 Servo Assembly, Reverse	<b>960 Piston, Overdrive Clutch</b>
911 Servo Spring, Reverse	961 Piston, Overdrive Direct Clutch (4th Clutch)
912 Servo Piston, Reverse	962 Piston, Intermediate Clutch (2nd)
913 Servo Pin, Reverse	963 Piston, Intermediate Clutch (3rd)
914 Servo Cover, Reverse	964 Piston, Forward Clutch
<b>915 Band Strut Assembly, Overdrive</b>	965 Piston, Direct Clutch
916 Band Strut Assembly, Intermediate	966 Piston, Reverse Clutch
917 Band Strut Assembly, Reverse	967 Piston, Low/ Reverse/Manual Low
918 Band Adjusting Screw, Overdrive	968 Piston, Reaction Clutch
919 Band Adjusting Screw, Intermediate	969 Piston, Coast Clutch (Overrun)
920 Band Adjusting Screw, Reverse	<b>970 Return Spring, Overdrive Direct Clutch</b>
921 Band Guide	971 Return Spring, Overdrive Clutch
922 Band Nut, Intermediate	972 Return Spring, Intermediate Clutch
923 Band Nut, Reverse	973 Return Spring, Intermediate Clutch (3rd)
<b>924 Regulator Assembly</b>	974 Return Spring, Forward Clutch
925 Accumulator Assembly, 1-2	975 Return Spring, Direct Clutch
926 Accumulator Spring, 1-2	976 Return Spring, Reverse Clutch
927 Accumulator Piston, 1-2	977 Return Spring, Low/ Reverse/Manual Low
928 Accumulator Pin, 1-2	978 Return Spring, Reaction Clutch
929 Accumulator Cover, 1-2	979 Return Spring, Coast Clutch
930 Accumulator Assembly, 2-3	<b>980 Retainer, Overdrive Direct Clutch Spring</b>
931 Accumulator Spring, 2-3	981 Retainer, Overdrive Clutch Spring
932 Accumulator Piston, 2-3	982 Retainer, Intermediate Clutch Spring
933 Accumulator Pin, 2-3	983 Retainer, (Low-Hold Manual Low)
934 Accumulator Cover, 2-3	984 Retainer, Forward Clutch Spring
935 Accumulator Assembly, 3-4	985 Retainer, Direct Clutch Spring
936 Accumulator Spring, 3-4	986 Retainer, Reverse Clutch Spring
937 Accumulator Piston, 3-4	987 Retainer, Low/ Reverse Clutch Spring
938 Accumulator Pin, 3-4	988 Retainer, Reaction Clutch Spring
939 Accumulator Cover, 3-4	989 Retainer, Coast Clutch Spring
940 Accumulator Assembly, Converter Clutch	<b>990</b>
941 Accumulator Spring, Converter Clutch	991 Linkage Assembly, Internal
942 Accumulator Piston, Converter Clutch	992 Linkage Assembly, External
943 Accumulator Pin, Converter Clutch	993 Rooster Comb, Manual Valve Selector Lever
944 Accumulator Cover, Converter Clutch	994 Park Rod Actuator
945 Accumulator Assembly, Low/ Reverse	995 Park Pawl Assembly
946 Accumulator Spring, Low/ Reverse	996 Cooler Line Fittings, (Or Test Fittings In Case)
947 Accumulator Piston, Low/ Reverse	997 TV Linkage Bracket
948 Accumulator Pin, Low/ Reverse	998 Oil Cooler, External
949 Accumulator Cover, Low/ Reverse	999 Oil Tube Sets