


## REMOVAL AND INSTALLATION

✚ **Labor Operations:** Click to display a list of Labor Operations associated with this procedure

### REMOVAL

1. Disconnect and isolate the negative battery cable.
2. Remove the clockspring. (Refer to 10 - Restraints/CLOCKSPRING/Removal and Installation) .
3. Release the retaining clip (1a).
4. Disconnect the electrical connection (1c).
5. Remove the exterior lamps and lighting multifunction switch module(1b).

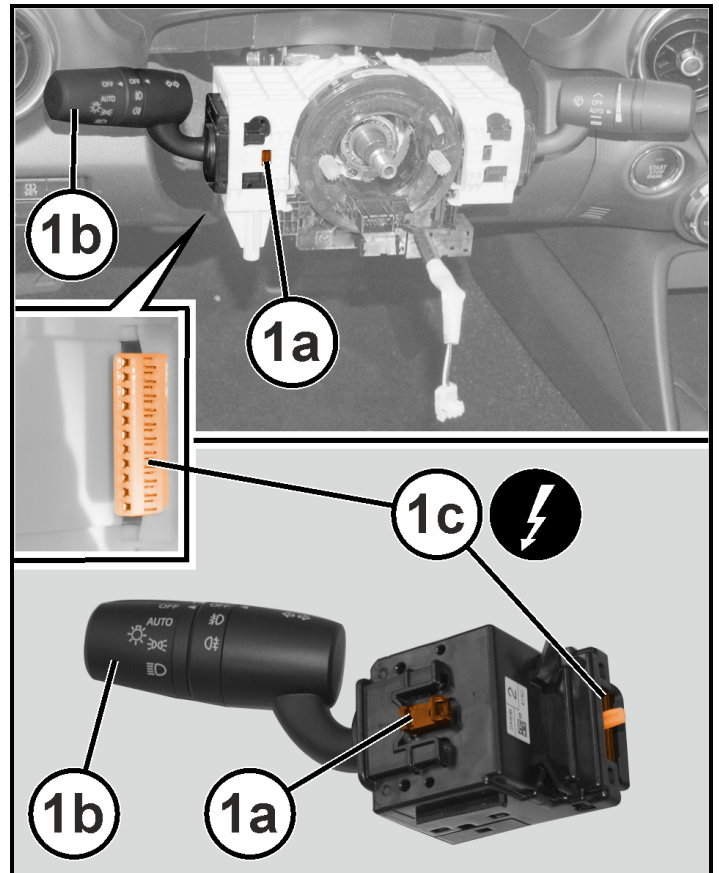

### INSTALLATION

1. Position the multifunction switch module for installation.
2. Connect the wiring harness connection to the multifunction switch module.
3. Secure the multifunction switch module with the retaining clip.
4. Install the clockspring. (Refer to 10 - Restraints/CLOCKSPRING/Removal and Installation) .

5. Connect the negative battery cable.