


REMOVAL AND INSTALLATION

☒ **Labor Operations:** Click to display a list of Labor Operations associated with this procedure

REMOVAL

1. Disconnect and isolate the negative battery cable.
2. Remove the steering wheel. (Refer to 19 - Steering/Column/WHEEL, Steering/Removal and Installation) .
3. Remove the steering column upper and lower shrouds. (Refer to 19 - Steering/Column/SHROUD, Steering Column/Removal and Installation) .
4. Release the retaining clip (1a), remove the wiper switch module for the windshield wiper (1b), disconnecting the wire harness connector (1c).

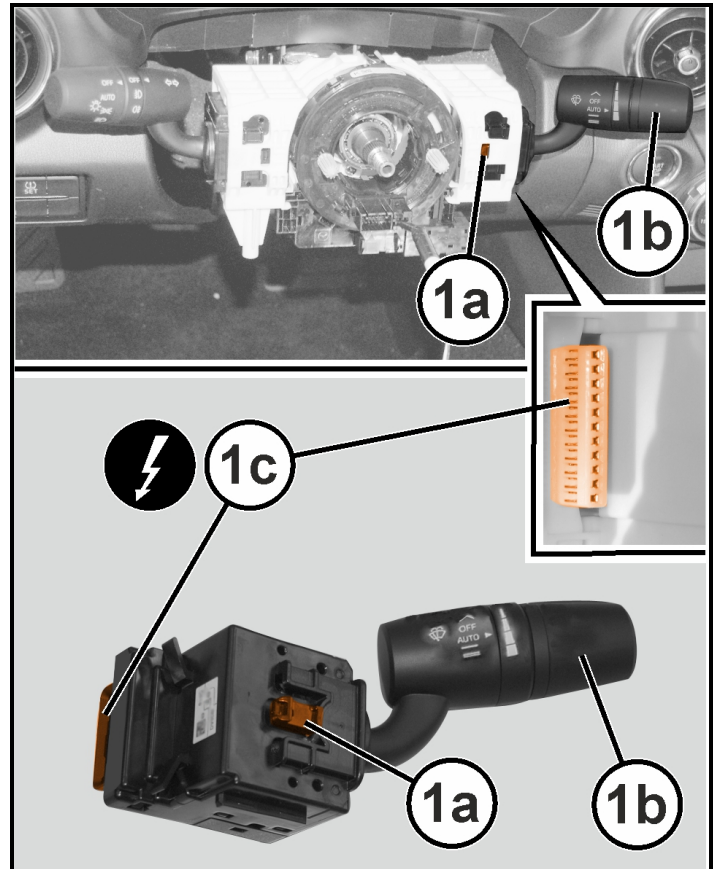

INSTALLATION

1. Ensure that the wiper switch module for the windshield wiper is not damaged.
2. Position the wiper switch module for the windshield wiper in its housing, connecting the wire harness connector and securing the retaining clip.
3. Install the steering column upper and lower shrouds. (Refer to 19 - Steering/Column/SHROUD, Steering Column, Lower/Removal and Installation) .
4. Install the steering wheel. (Refer to 19 - Steering/Column/WHEEL, Steering/Removal and Installation) .

5. Connect the negative battery cable.
6. Connect the diagnosis equipment and check that there are no errors in the system.