

REMOVAL AND INSTALLATION

☒ **Labor Operations:** Click to display a list of Labor Operations associated with this procedure

REMOVAL

NOTE:

Before removing and installing the Driver AirBag (DAB), the following preliminary operations must be carried out.

Turn the ignition off.


Turn off the instrument panel.

Disconnect and isolate the negative battery cable. If equipped with an Intelligent Battery Sensor (IBS), disconnect the IBS connector first before disconnecting the negative battery cable.


Wait for at least 1 minute before continuing.

FOLLOW ALL THE RECOMMENDED SAFETY INSTRUCTIONS. (Refer to 10 - Restraints/Warning) .

1. Disconnect and isolate the negative battery cable. If equipped with an Intelligent Battery Sensor (IBS), disconnect the IBS connector first before disconnecting the negative battery cable.
2. Remove the steering wheel. (Refer to 19 - Steering/Column/WHEEL, Steering/Removal and Installation) .
3. Remove the steering column upper and lower shrouds. (Refer to 19 - Steering/Column/SHROUD, Steering Column/Removal and Installation) .
4. Disengage the upper retaining clip (1a) and the side retainers (1b) and move aside the clockspring for airbag module on steering wheel (1c).

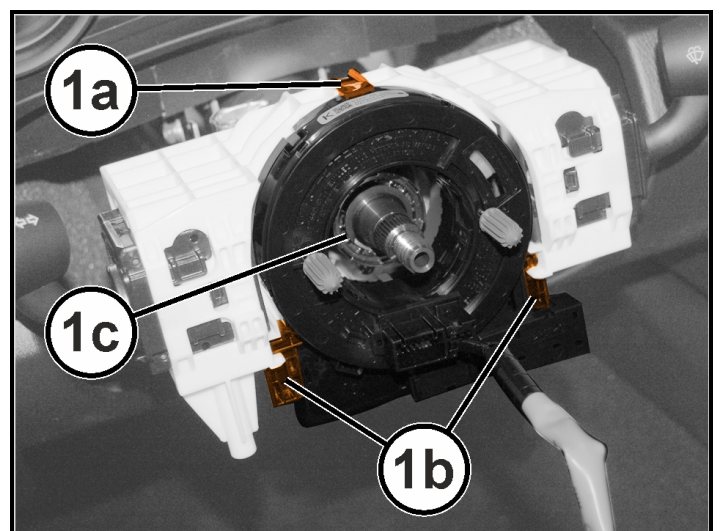

5. Disconnect the wire harness connectors (1).

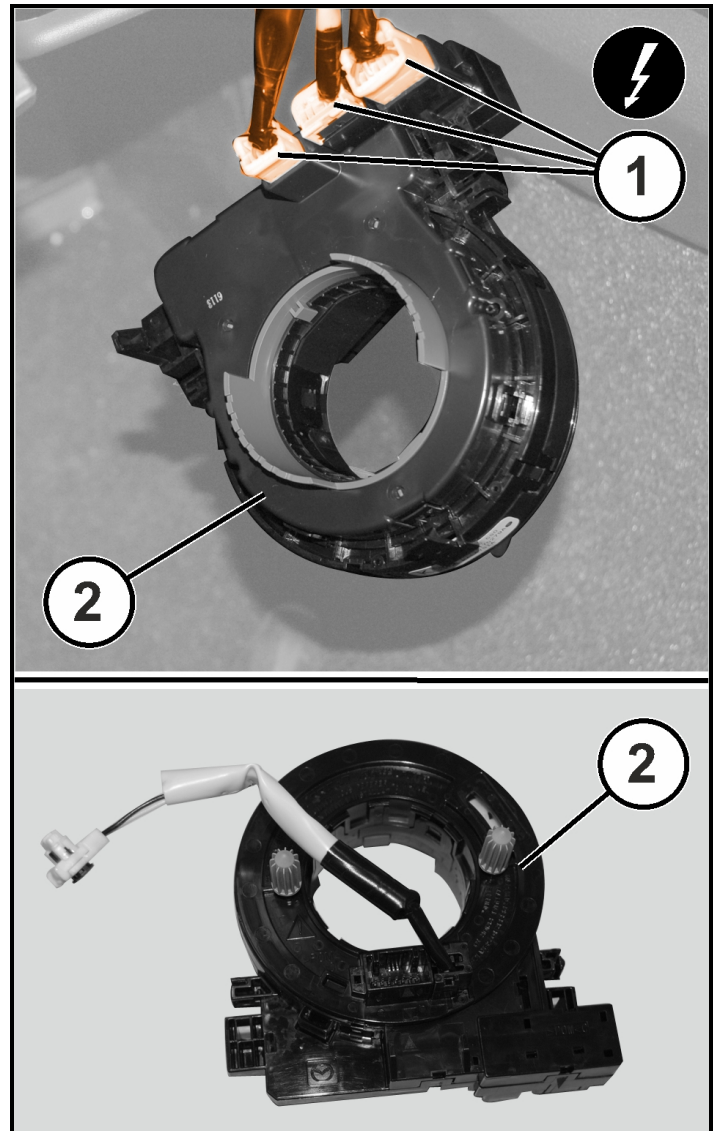

6. Keep the clockspring for airbag module on steering wheel.

INSTALLATION

1. Be certain that the clockspring is not damaged.
2. Connect the wire harness connectors.
3. Position the clockspring for airbag module on steering wheel, engage the upper retaining clip and the side retainers.

4. Install the steering column upper and lower shrouds. (Refer to 19 - Steering/Column/SHROUD, Steering Column, Lower/Removal and Installation) .
5. Install the steering wheel. (Refer to 19 - Steering/Column/WHEEL, Steering/Removal and Installation) .
6. Connect the negative battery cable. If equipped with an Intelligent Battery Sensor (IBS), connect the IBS connector.
7. Connect the scan tool and check that there are no Diagnostic Trouble Codes (DTC) in the system.