
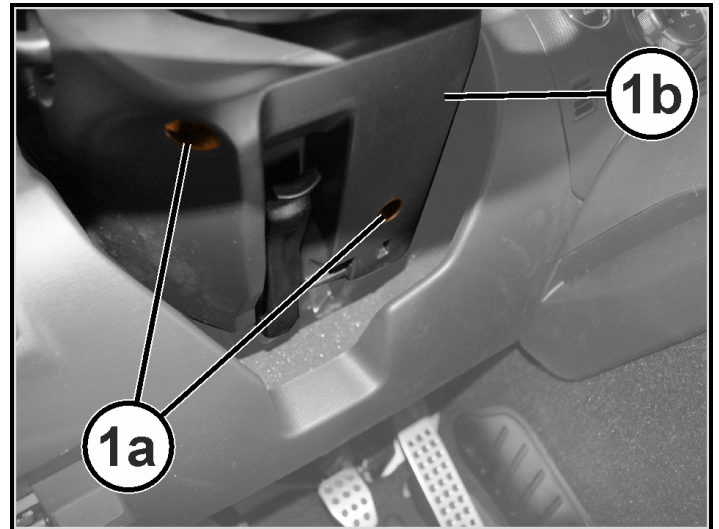


## REMOVAL AND INSTALLATION


 **Labor Operations:** Click to display a list of Labor Operations associated with this procedure

### REMOVAL

1. Place the steering column tilt lever in the released position.
2. Remove the mounting screws (1a) of the steering column lower shroud (1b).



3. Remove the steering column lower shroud (1a) by releasing the internal retainers (1b).

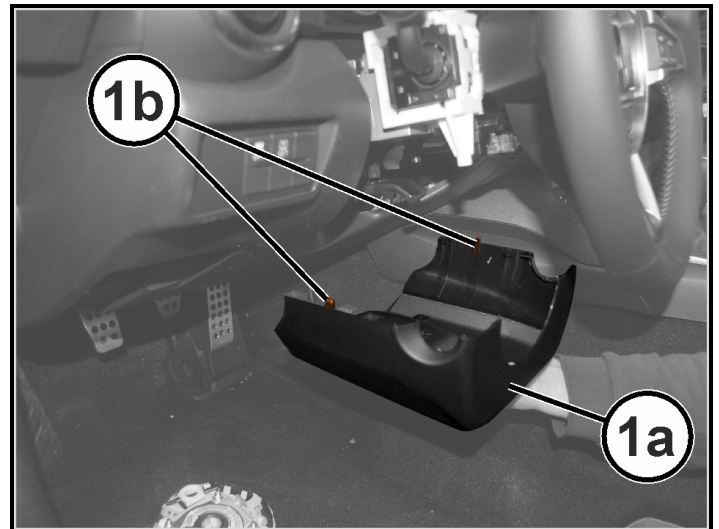

### INSTALLATION

1. Check that the steering column lower lining is not damaged.

2. Position the steering column lower shroud and engage the inner retainers.
3. Securely tighten the fixing screws for the lower trim.
4. Move the steering wheel into middle position and secure it with the lever.