


REMOVAL AND INSTALLATION

 **Labor Operations:** Click to display a list of Labor Operations associated with this procedure

REMOVAL

1. Remove the steering column upper shroud (1a), by disengaging it from the retainers (1b) of the steering column lower shroud.

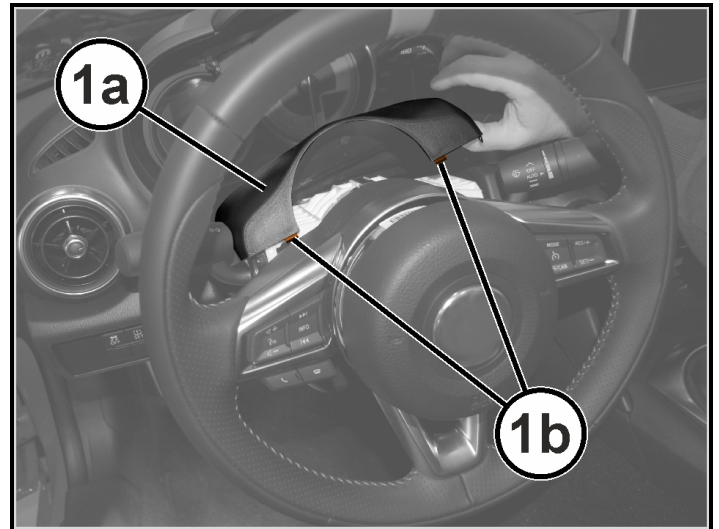

INSTALLATION

1. Check that the steering column upper lining is not damaged.
2. Position the steering column upper shroud and engage the inner retainers to the steering column lower shroud .