
HYDRO-BOOST WITH RAM ASSIST (HI-VOL PUMP)

Hose installation diagram

POWER STEERING FLUID: Howe Power Steering Fluid PN 1105 (GM Mr. Goodwrench® PN: 89020661 may be substituted if needed)

CAUTION: DO NOT USE ATF (AUTOMATIC TRANSMISSION FLUID)

NOTE: Hose lengths will vary with each installation, custom hoses must be fabricated. Hose Kit P/N 950 available separately.

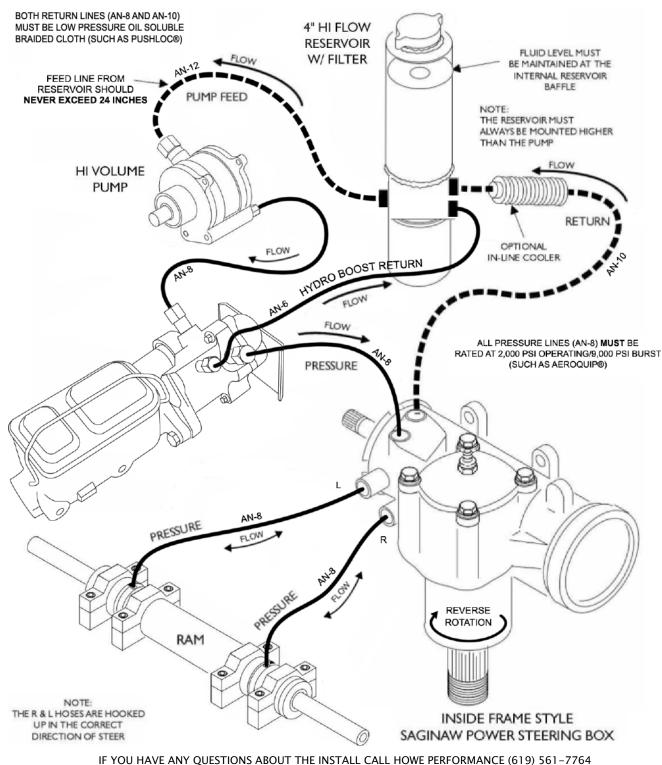

10/30/2006 BASIC